








JMG / MG  
—— OPERATING MANUAL ——




Before operating this unit, read the instructions carefully

# IDENTIFICATION OF PARTS

## JUICER

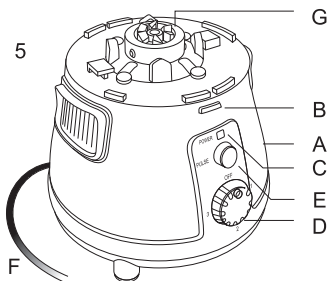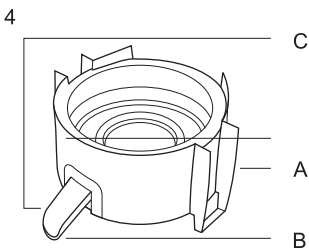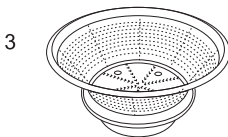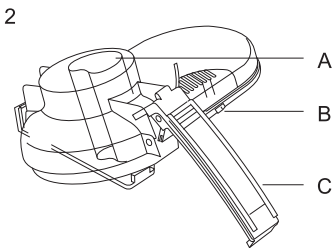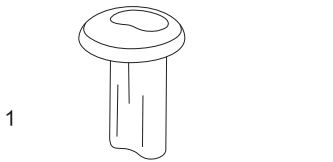


1. **Plunger**
2. **Juicer Cover**
  - A. Feeder Opening
  - B. Locks
  - C. Clamp (Self Locking)
3. **Mesh Cutter Spinner (Filter)**
4. **Juice Container**
  - A. Lock Holder Slot
  - B. Spout
  - C. Spout Cover
5. **Motor Unit**
  - A. Motor Housing
  - B. Slots for holding Clamps (of Juicer Cover)
  - C. Indicator Light
  - D. Speed Knob
  - E. Whip Button
  - F. Mains Cord
  - G. Driving Coupler made up of (1) Driving Base and (2) Driving Gear (Set of Teeth)
6. **Driving Gear (Extra)**
7. **Cleaning Brush**
8. **Pulp Container**
  - A. Locking Grooves

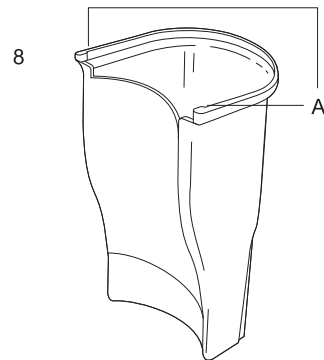


# IDENTIFICATION OF PARTS


## BLENDER

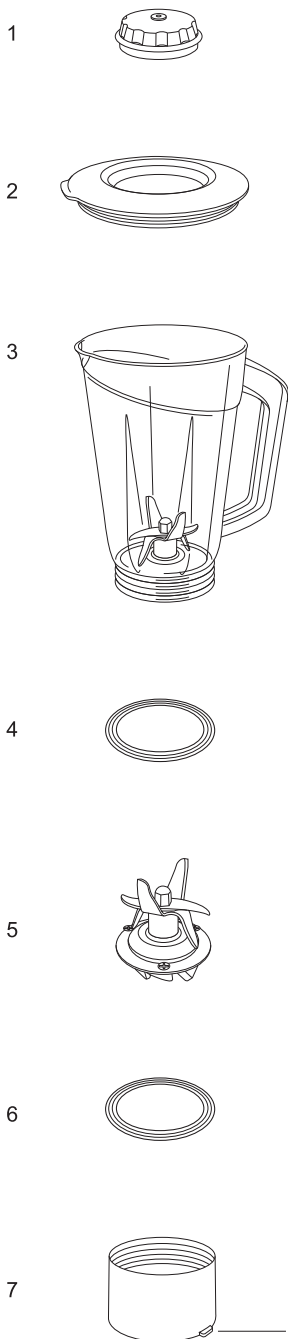

## GRINDER

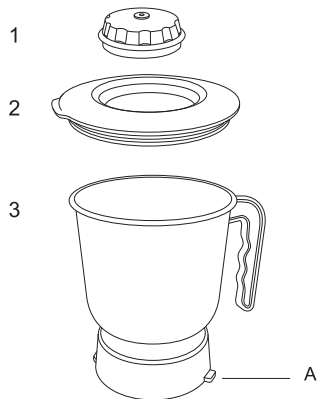

## CHUTNEY GRINDER

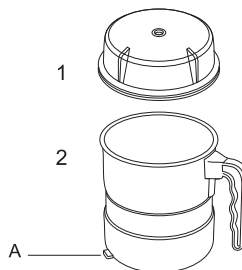

### BLENDER

1. Centre Cap (Measuring Cup)
  2. Cover
  3. Liquidiser Jar
  4. Rubber Packing (Washer)
  5. Cutter Assembly
  6. Rubber Packing (Washer)
  7. Socket
- A. Locks

### GRINDER

1. Centre Cap (Measuring Cup)
  2. Cover
  3. Stainless Steel Jar
- A. Locks


### CHUTNEY GRINDER

1. Cover
  2. Stainless Steel Jar
- A. Locks


# USING AS JUICER

Before using dismantle each part and learn their disassembly and assembly methods.


## DISASSEMBLY

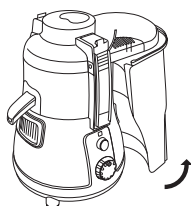


Remove the pulp container by slightly lifting it to unlock from the juicer cover.

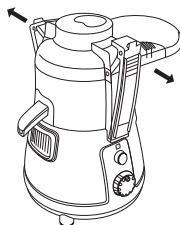


Pull out the clamps which are on both sides of the motor housing.

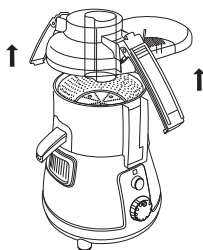

Remove the juicer cover.

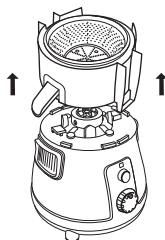


Lightly lift the juice container with both hands. The filter will come out with it.

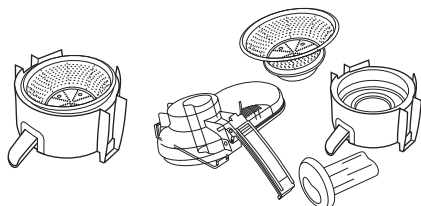


The filter can be easily separated from the juice container by pushing it up from the base. Dismantle each part. Wash all parts well with water except the motor housing.

## ASSEMBLY

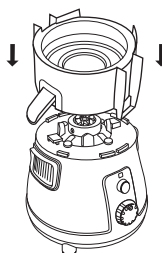


Place the juice container on motor housing. Make sure the locks of juice container match the locking grooves located at the top of motor housing.

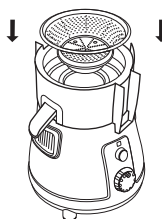


Put the filter in juice container.




Lightly press the cutter to ensure that the spinner is properly fixed in position.

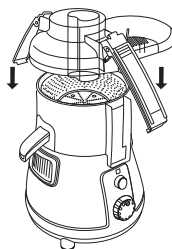

Place the juicer cover ensuring that its locks match the locking grooves.

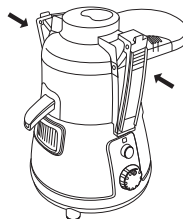


Firmly close the clamps at both sides of the motor housing. Put the pulp container in locked position by pushing it.

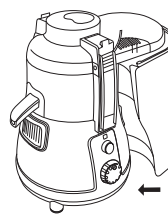


## USING AS JUICER


### EXTRACTING THE JUICE

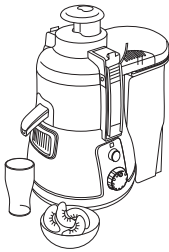


Place a glass under spout to collect juice.

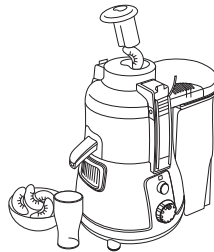

Use the plunger because most fruits and vegetables need additional help.

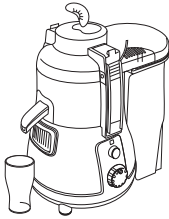


Switch the juicer on to 'LOW' speed and put the fruit and vegetable into feeder opening.

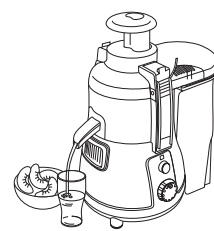


The fruit is completely crushed by the cutter. The juice and pulp are automatically separated. Transparent juicer cover lets you know when it is time to empty pulp container.

## CLEANING THE JUICER

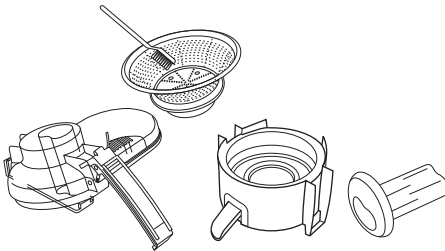

The plug should be disconnected. Follow instructions for disassembly of juicer. Rinse each part in cold or luke warm water. Cutter spinner also works as the filter, so rinse this specially well. After rinsing, wipe the water off and let it dry before storing.

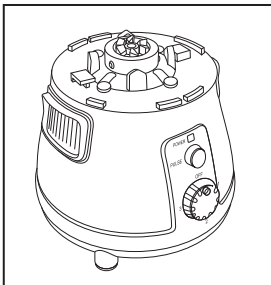


## CLEANING THE MOTOR UNIT


To clean the motor housing simply wipe with a damp cloth and dry. **Never immerse motor housing in water.**

# USING THE BLENDER


## HOW TO USE

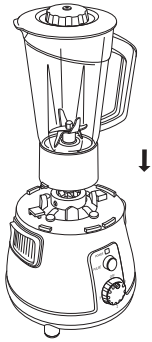

Place the Blender on the motor unit firmly.

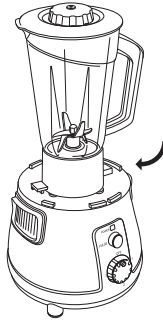


Turn the Blender clockwise to lock it.

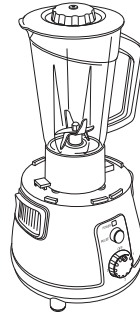

Plug into a convenient electric outlet. Put ingredients into jar and cover it. Select 'MED' speed by turning the knob. However a speed different than the one suggested above can be used to suit the recipe.


# CLEANING THE BLENDER

## DISASSEMBLY

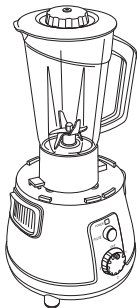


To clean the liquidiser jar quickly and thoroughly fill the jar one third full of luke warm water and add a few drops of detergent or soap flakes. Switch the motor ON and run for some time. The soapy water will clean the jar. Switch off the motor and empty the blender jar.


Refill the jar with fresh water without any detergent. Restart the motor and empty the jar again after switching off.

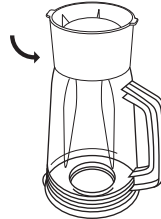

Place your liquidiser jar upside-down and unscrew the socket anti-clockwise.

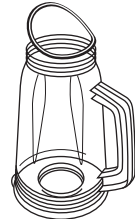

Remove the lower Rubber packing (washer).

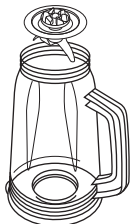


Remove both the cutter assembly and upper rubber packing (washer).



Remove the upper Rubber packing from cutter assembly.


## ASSEMBLY

Follow the above sequence in **reverse order** to assemble again

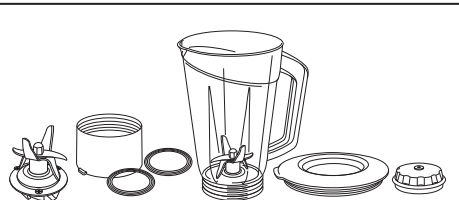


Rinse well each part and wipe off the water with a cloth and let them dry before storing.


## USING AS GRINDER

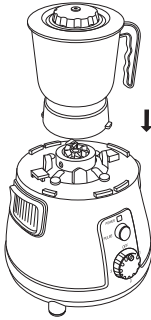

Fill up the grinder jar with ingredients upto 2/3 (maximum) of its capacity. Make sure that the locks of grinder jar are in proper position so as to match with the locking grooves of the motor unit.

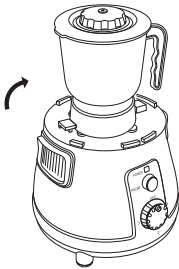


Turn the jar clockwise to lock it.

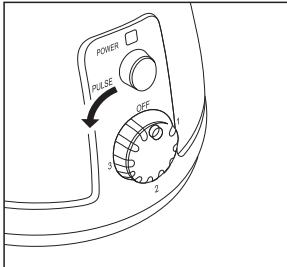

Plug into a convenient electrical outlet. Turn the knob to 'HIGH' speed (attaining high speed directly instead of going through speed (attaining high speed directly instead of going through Low and Medium speed, as the switch can be operated in both directions, either clockwise or anti-clockwise).


## CLEANING THE GRINDER

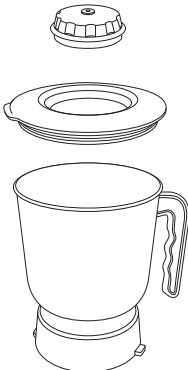

The grinder jar is a complete assembled unit with fixed cutter blades. The jar is made of stainless steel and socket is made of aluminium. These are fixed together and can not be dismantled.


So clean the jar with a soft damp cloth. Wash plastic cover and center cap with water and wipe off water with cloth before storing.

## HOW TO FIT BLADES

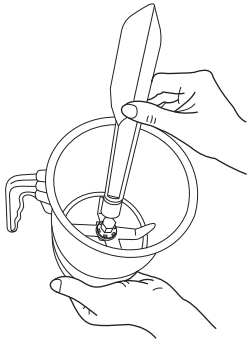

To fit the dry grinding blade on the shaft in the jar, hold the Nylon coupler on the underside of the jar with one hand, and with the help of the spanner (provided in the handle of the spatula) tighten by rotating it anti clockwise till the blade is securely fastened.

 
Repeat the above procedure for the vegetable grating / meat mincing blade, wet grinding blade and whipping blade assemblies.



### SPATULA

to clean all the jars from inside and as a spanner to fit and remove the blades.

 
## DIFFERENT BLADES FOR WET GRINDING / BLENDER JAR



### WET / DRY GRINDING BLADE


for wet grinding of ■ Batter for Idli, Vada, Dosa ■ Pureeing Tomatoes ■ Mixing Milk, Shakes, Fruit juices & Soups etc.

 for dry grinding of ■ All types of spices ■ Rice ■ Turmeric ■ Roasted ■ coffee beans ■ All varieties of dal.



### GRATING / MINCING BLADE


for grating and chopping of vegetables and mincing of meat etc.

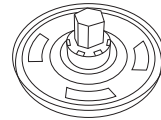

### WHIPPING BLADE

for whipping ■ lassi ■ Whisking egg white ■ Creaming, butter milk ■ Beating whole eggs for omelette etc.

## USAGES OF CHUTNEY GRINDING JAR

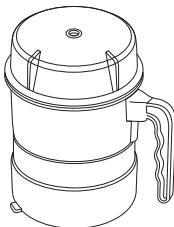

**THE CHUTNEY GRINDING JAR** has a fixed blade. It is suitable for ■ Wet chutney ■ Garlic & ginger paste ■ Poppy seeds (Khus Khus) ■ Grating fresh / dry coconut ■ Small quantity dry grinding.

### TIPS WHILE USING CHUTNEY GRINDING JAR

1. While grating fresh / dry coconut for coconut chutney, cut the pieces in such a way that their length is between 1.5 inches and 2 inches and breadth is 1/4th inch.
2. Avoid over grating of copra as it makes the grated copra soggy due to the oil extraction.
3. While grinding ginger & garlic paste, scrape the ginger skin and cut into small pieces. Even the garlic skin has to be peeled off for a fine paste. Little water may be added to get a smooth paste.



## USAGES OF THE BLENDER JAR

The **blender jar** has a lid with a removable cap on it. By removing this cap, contents inside the jar can be checked and water etc. added, if required without detaching the lid.

The Blender jar is suitable for ■ Milk / fruit shakes, cold coffee, lassi, buttermilk ■ Coconut milk, chutneys ■ Blending juices, mocktails, soups etc. ■ Whisking egg whites ■ Beating whole eggs. ■ Pureeing tomatoes.

## TIPS WHILE BLENDING / LIQUIDISING

1. Fill jar only upto 3/4th of its capacity to prevent spilling of shakes, lassi etc.
2. While blending thick pastes such as purees, sandwich spreads etc., fill the jar only to 1/3rd or its capacity. Add liquid or water to prevent the paste from becoming too thick to overload the motor.
3. Do not grind raw meat in blender jar. Do it in grinder jar.

## USING OF THE GRINDING JAR

The **grinder jar** has a lid with a removable cap on it. By removing this cap, contents inside the jar can be checked and water etc. added, if required without detaching the lid.

It is suitable for grinding of ■ Spices ■ Raw Rice ■ Sugar ■ Dried or fried dal ■ Roasted coffee beans ■ Dried & pounded turmeric ■ Raw Meat ■ Batter for Idli, Vada, Dosa etc. ■ Sambhar Masala ■ Garlic & Ginger Paste ■ Sauces, Jams ■ Sandwich spreads, Peanut Butter etc. ■ Grating Orange peels for marmalade.

## TIPS WHILE DRY GRINDING

 
1. For all dry grinding, ensure that the ingredients are dry or fried or roasted in the oven or sun dried.
2. Avoid over grinding. It makes the rice powder sticky. It also makes sugar or salt melt and stick to the blades which damages the machine.
3. While dry grinding, the jar may heat up because of friction. It has nothing to do with motor.
4. For extra fine grinding, sieve the ground substance through a fine sieve to the consistency required. The left over can be put in the grinder, reground and sieved again.
5. Hard substances like turmeric should be well pounded before being put in the jar for grinding.
6. For best results, raw meat should be kept in refrigerator for half an hour before processing.

## TIPS WHILE WET GRINDING


1. While grinding rice or dal for idli batter, soak it for at least 6 - 8 hours in water.
2. Sometimes during tough wet grinding, air bubbles develop inside the paste and the blades start rotating empty resulting in heavy noise. Whenever it happens so, stop the motor immediately. Stir the paste and restart the machine. Add little water if required.
3. Avoid overloading the machine with extra heavy load. If after loading the machine and switching on the electric supply, the motor does not start or run at a very low speed, check if the material filled is too much. If so, reduce it and proceed again.
4. While grinding thick paste for Idli, Vada, Dosa etc., never fill the jar to more than 2/3rd its capacity.

## HOW TO CHANGE THE DRIVING GEAR


A spare set of “**Driving Gear Teeth and screws**” is being provided alongwith. If proper care is taken to ensure that the **motor stops completely before mounting, removing or replacing the jar**, the Driving Gear may never get damaged. In case carelessness occurs and Driving Gear Teeth get worn off, the set of teeth can be easily replaced at home.



Unscrew the three screws located amidst the teeth of Driving Gear.

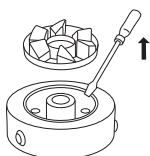

Lift up the worn set of Teeth from the Driving Base by putting a screw driver in any of the two grooves provided.

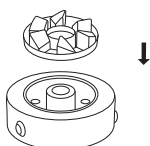

Clean the top surface of the Driving Base with a dry cloth. Put a new set of **Driving Gear Teeth** and tighten with screws. Use either the old screws or the new ones being supplied alongwith. Screws of a different size may damage the unit.

## CARE AND MAINTENANCE

- Read all instruction carefully and be familiar with your machine before use.
- Before first use or after long unuse, check to see if shaft rotates smoothly.
- The air ventilation holes at the bottom of the motor unit may get blocked if the machine is used on any thin plastic sheet cloth or paper etc. They get sucked up, blocking the ventilation holes and causing excessive heating up of the motor.
- For optimum efficiency, the machine should ne operated at the specified voltage only, Wide voltage fluctuations during operation affect the quality of blending / mixing adversely.
- Never run the blender empty.
- Do not attempt to repair the machine at home or allow any unauthorised person to do it either. In the event of your machine needing attention take it to your dealer.
- Always place the blender / grinder jar onto the motor unit properly in order to avoid vibration and mismatching of the blender gear with the driving gear of the motor unit.
- Avoid overloading the machine with extra heavy load. If after loading the machine and switching on the electric supply, the motor does not start or runs at a very low speed, check if the material being processed is too much. If so, reduce it and proceed again.

## PRECAUTIONS

- Always use 3 pin plug for connecting the electrical supply. After every use, disconnect electric supply by turning off the switch and removing the plug from the socket.
- Do not let cord hang over the edges of tables or counter or touch hot surfaces.
- To protect against electrical hazards, do not immerse motor until or cord plug in water or other liquids. Never use outdoors or on wet surfaces.
- Keep away from the moving parts. Do not insert finger, knife etc. in jar while in operation.
- Do not remove or replace any attachment or attachment cover when the motor is on.
- Switch off the motor, if it stalls or smoke emanates from the motor.
- Blades are sharp, handle carefully while fixing, removing or cleaning them.
- Keep machine away from direct heat or sun. Never wash the parts in hot water.
- Do not run the machine unless jar is in position. Covers and lids should be firmly placed too.
- Cover the liquidiser / grinder jar before switching the motor on else small quantity of ingredients may be hurled out of the jar.
- Do not put very hot liquid in the liquidiser. Allow cooked vegetables and hot liquids to cool before pouring into the liquidiser.
- Never put ice cubes in blender jar. Always use crushed ice.
- Do not run the motor for more than 90 minutes continuously.

## SPECIFICATIONS★

### Model Type & No.

Model : Heavy Duty universal type 900 Watts with double ball bearing

Power Supply : 230 to 240 Volts, AC 50-60Hz.

Power Consumption : 900 Watts on maximum load.

Rating : 90 minutes.

Speed Control : 3 Speed with Rotary action switch.  
: Whipper button for momentary motion

Motor Speed : No load speed maximum approx. 22000 R.P.M.

Protection : Class I double insulated.

Flex Cord : P.V.C. approx. 2.15 meters usable with 5 Amp. 3 pin plug.

### Net Weight in Carton

Dimensions (in Cms) :

Capacity of Jars	Juicer	Blender	Grinder
JMG	: Continuous (90 Minutes)	1750 ml.	1000 ml.

Capacity of Jars	Blender	Dry Grinder	Chutney Grinder
MG	1500 ml.	1000 ml.	400 ml.

★ Due to continuous upgradation in quality, design and specifications can be changed at any time without notice.

★ Processing capacity varies for different materials.

**ONE YEAR  
WARRANTY**

WARRANTY IS NOT VALID IF  
THIS PRODUCT IS USED FOR  
COMMERCIAL PURPOSE

is warranted against manufacturing defects for a period of ONE YEAR from the date of purchase. Within this period any defective unit will be repaired or replaced at manufacture's option free of cost subject to the unit being **delivered to authorized service centre at customer's cost.**

The warranty does not cover damages resulting from commercial use, accident, mishandling or negligence on the part of customer or non compliance of the instructions in the operating manual or if the mechanism is tampered with by the customer or any unauthorized person other than our service personnel.

The warranty card duly stamped and signed by the dealer alongwith the cash memo should be produced to the authorised service centre, otherwise the warranty will be treated as invalid. Liability for consequential damages or loss in neither accepted nor implied under the warranty.

Sr. No. \_\_\_\_\_ Checked by \_\_\_\_\_

Cash Memo No. \_\_\_\_\_ Date \_\_\_\_\_

Customer's Name & Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Customer's Telephone \_\_\_\_\_

Signature of the Dealer

RUBBER STAMP  
OF  
THE DEALER